


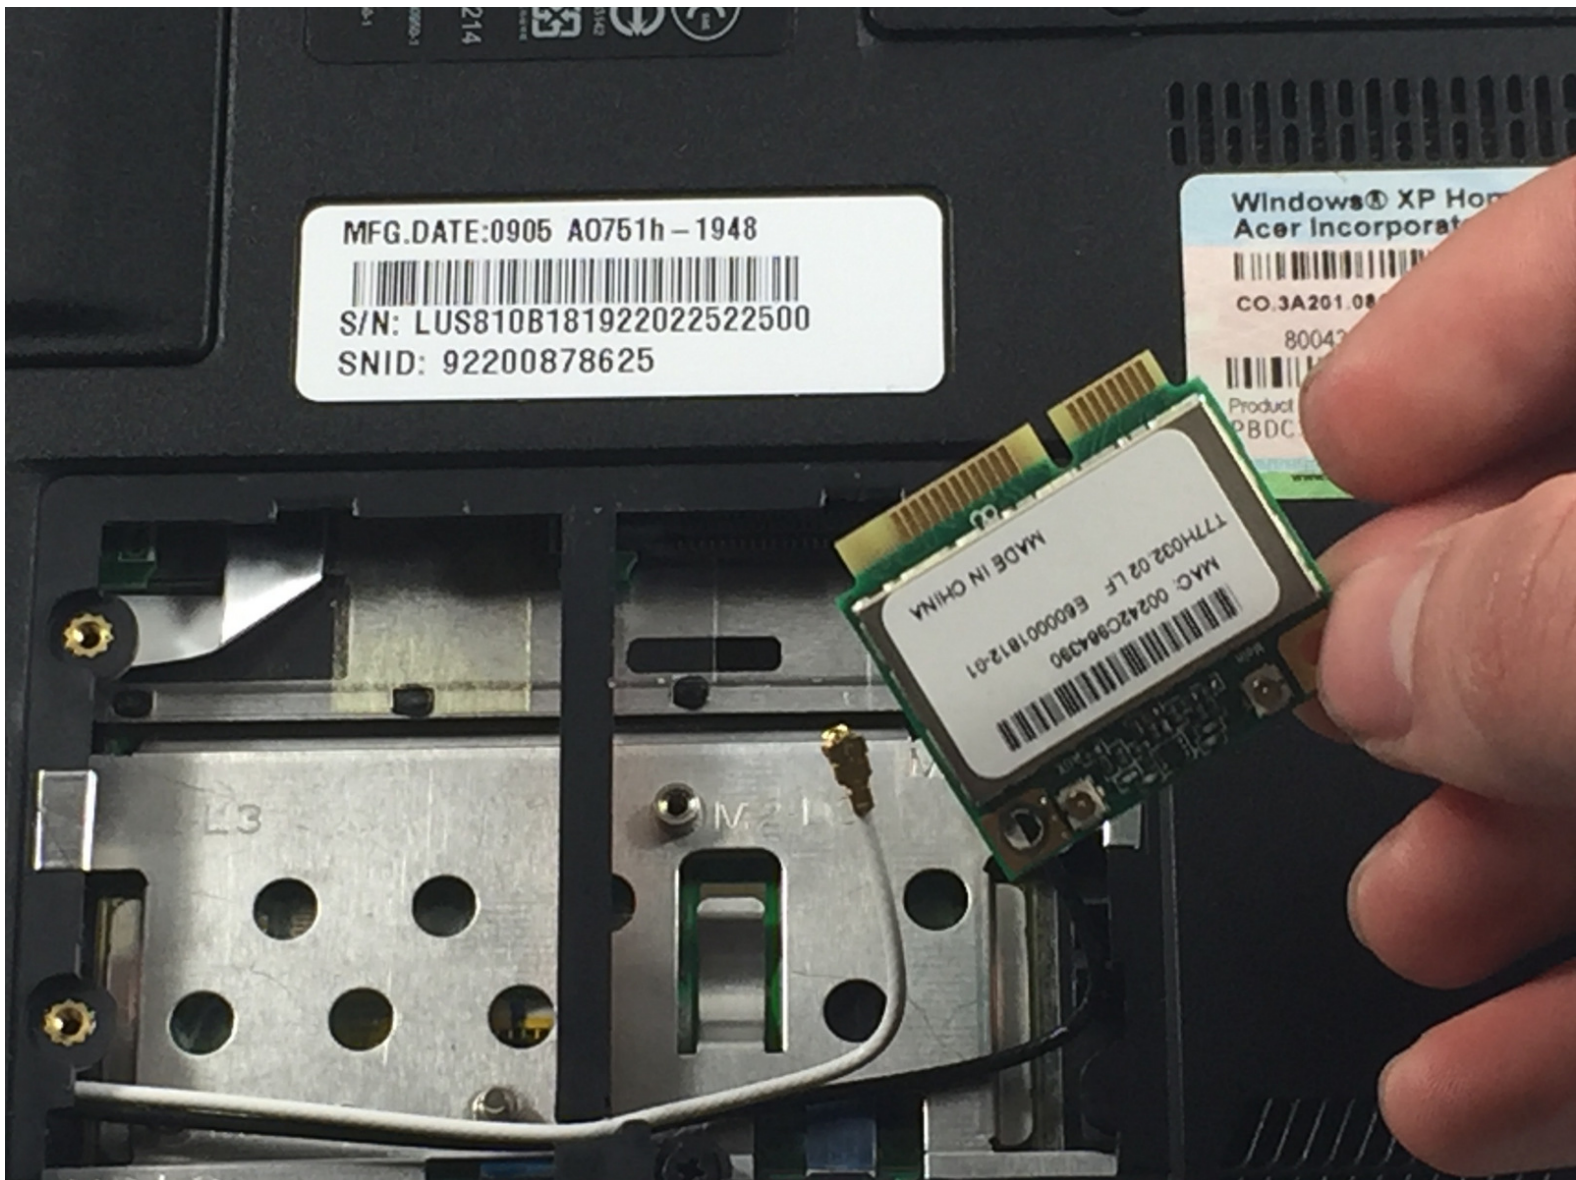

Acer Aspire One 751h-1948 Network Card Replacement

This guide will help you replace the network card of the Acer Aspire One 751h-1948.

Written By: Francisco Monteiro Junior



INTRODUCTION

This guide will help you replace the network card of the Acer Aspire One 751h-1948.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery




- Close the laptop and flip it over to view the back of the laptop.

Step 2



- Unlock the right side of the battery by sliding the battery lock to the right. Then slide the left lock to the left and remove the battery.



Step 3 — Network Card

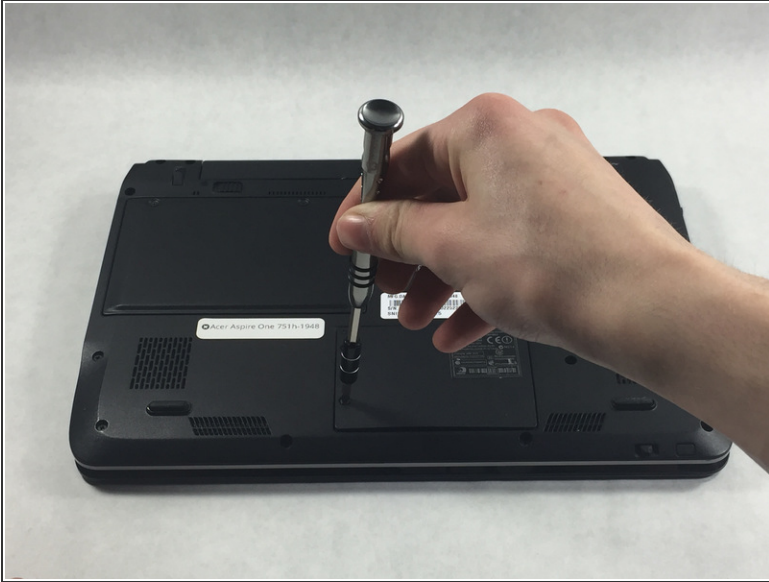

- Unscrew the two Phillips #0 (M2-L2.5 mm) holding down the network card panel.

i These screws don't come all the way out.

Step 4

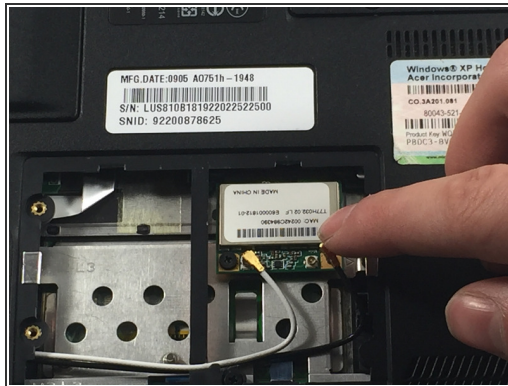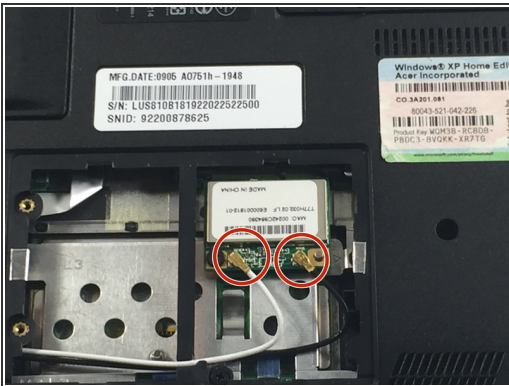

- Unplug the two connecting cables by lifting them up. They should unclip easily.

Step 5



- Remove the screw Phillips #0 (M2-L3 mm) holding down the network card. Pull out the card.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-18 02:14:35 PM.